


## CALIBRATION INSTRUCTIONS rapidcount T 575


**Required calibration cards:** 1 x pink calibration card, 10 x grey calibration cards, 10 x white calibration cards

1. Connect the power adapter with the device. Turn on the device. Then press the **“CLEAR“** button 5 times. A window with „Input Password“ opens on the display. Please enter a 0 and confirm it with the **“START“** button.

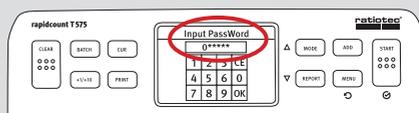


2. Now the **“Maintenance Menu“** opens. Select **“Sensor Adjust“** and confirm it with the **“START“** button. Afterwards please press the **“REPORT“** button to get to **“Static Adjust“**. Confirm it again with the **“START“** button.

3. Open the cover of the device so that the feed rollers are visible. Place the pink calibration card centrally under the feed roller. Then close the cover and press the **“START“** button. The calibration card is automatically ejected after the calibration.

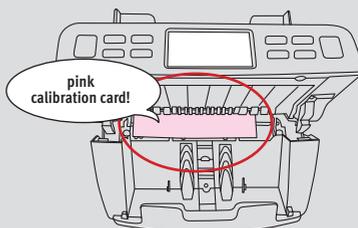


4. Press the **“REPORT“** button to get to **“Image Dynamic Adjust“**. Confirm it with the **“START“** button. Place all gray calibration cards on the upper feed. Repeat this process until **“Press START key“** is shown.

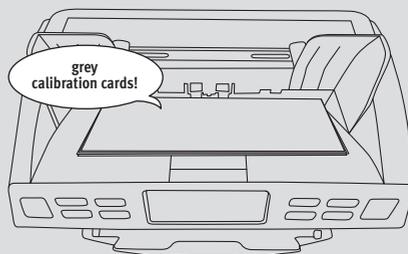

**CALIBRATION INSTRUCTIONS rapidcount T 575****5.**

Then press the **"START"** button. Now place the pink calibration card on the upper feed. Repeat this process until "Image adjust success" is shown. Press the **"REPORT"** button again to get to "Size Dynamic Adjust". Then press the **"START"** button.

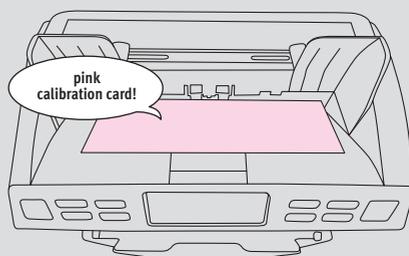**6.**

Place all white calibration cards on the upper feed. Repeat this process until "Size adjust success" is shown. Finally, press the **"MENU"** button 2 times to return to the counting mode.

