



## UPDATE GUIDE FOR rapidcount X 300 P

- 1.** Connect the device to the power supply via the mains cable.

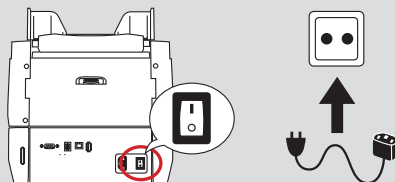


- 2.** Remove the SD card dummy and insert the SD card into the SD card slot on the rear side of the device. Meanwhile please keep the device turned OFF.

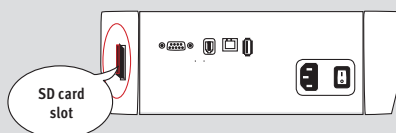

- 3.** Now start the device as usual.



- 4.** The display will now show you 2 options  
 a) Press the Mode button to skip the update  
 b) Press the Reset button to start the update

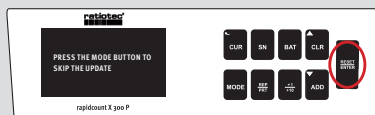

- 5.** Press the Reset button to start the update process.

- 6.** After the display shows that the update process has ended, the device must be switched off and the SD card removed.