



**UPDATE INSTRUCTIONS rapidcount X 500**


- 1.** Connect the power cable. Leave the device switched off.

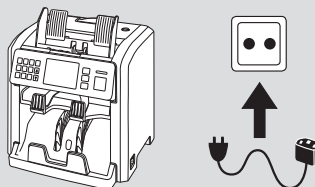

- 2.** Connect the USB stick to the device (front side).

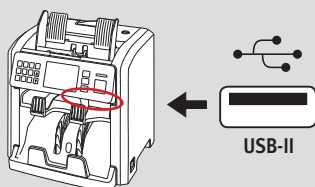

- 3.** Now switch on the device.



- 4.** The update will start automatically.



- 5.** As soon as the update has been carried out, the messages “Update success” and “Please restart” will appear in the display.



- 6.** Switch the device off again.

- 7.** Now remove the USB stick. Your device is now updated.

**After each update, we recommend performing a calibration. The procedure can be found in the separate calibration instructions.**